



## OPERATING INSTRUCTION

### Electric Fence Energizer


Read full instructions before use!



2031 300th Street · Washington, IA 52353  
www.premier1supplies.com  
800-282-6631 · 319-653-7622



assembled in US and Europe  
horizont group gmbh  
Division agrartechnik

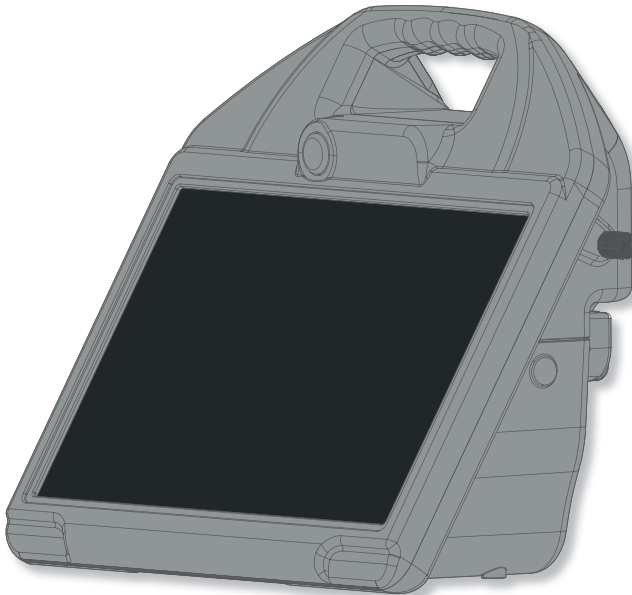

#### IntelliShock PRS-I 25

Voltage at no load:  
**max. 8900v**

Voltage at 500  $\Omega$   
(animal contact):  
**max. 3000v**

#### IntelliShock PRS-I 50 HotShock PRS-B 50

Voltage at no load:  
**max. 10500v**

Voltage at 500  $\Omega$   
(animal contact):  
**max. 3600v**

#### Requirements:

The energizer complies with  
the **International Safety  
Standard IEC 60335-2-76 +  
EN 60335-2-76.**




**IntelliShock®**  
PRS-I 50 | Item #114100 & PRS-I 25 | Item #114110

**HotShock®**  
PRS-B 50 | Item #114120


# SPARE PARTS

On/Off Button:  
**84793**

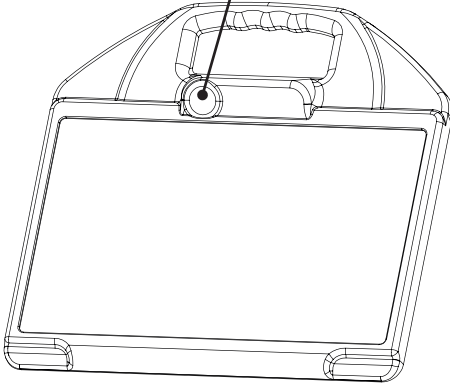

PCB: IntelliShock PRS-I 25: **60738**  
PCB: IntelliShock PRS-I 50: **60737**  
PCB: HotShock PRS-B 50: **47RPCHLS67**


Transformer:  
**47TX5873**

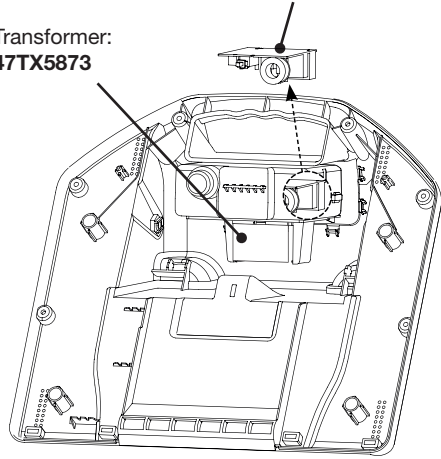


Red Terminal Knob: **47PLAS0092**  
Green Terminal Knob: **47PLAS0212**



Wiring Harness:  
**130820**









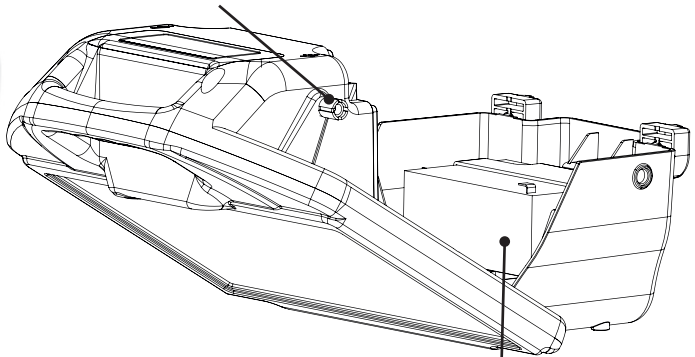


12v/12amp battery:  
**121600**

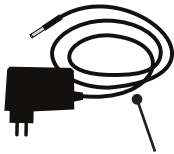


110v Battery Recharger:  
**47BC-US**

## INSTALLATION AND CONNECTION

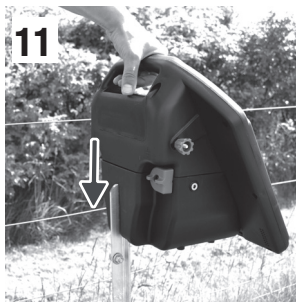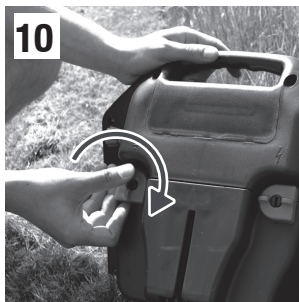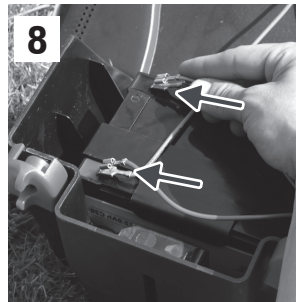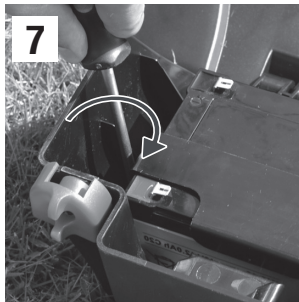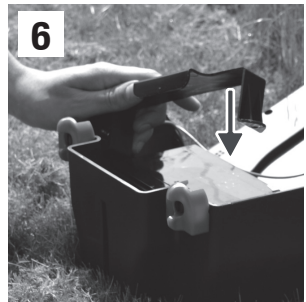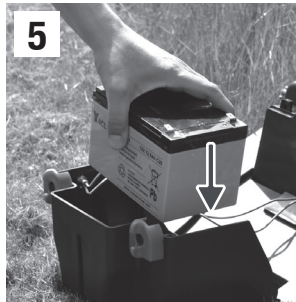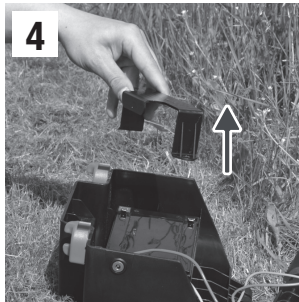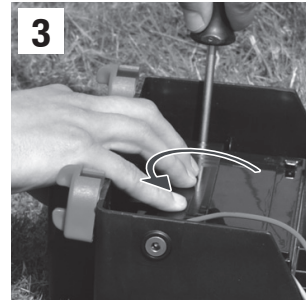
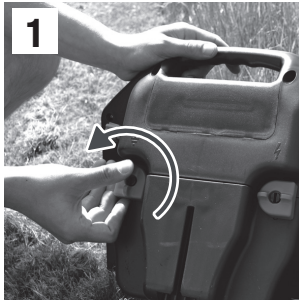


**Fig. 2**

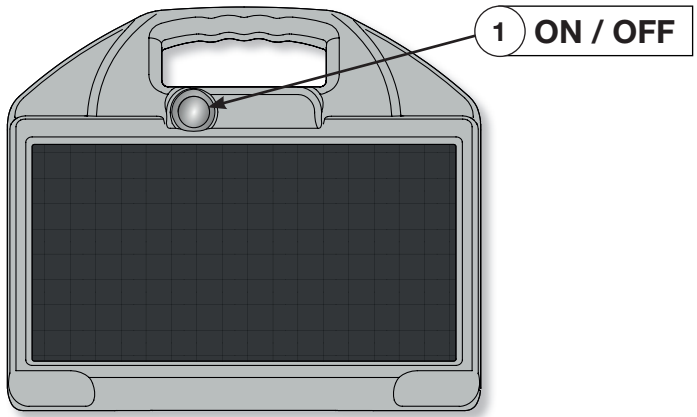

**Fig. 3**

For recharging battery externally, use only 47BC-US. During recharging do not connect the energizer to the fence!

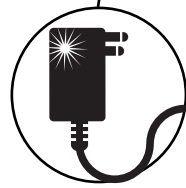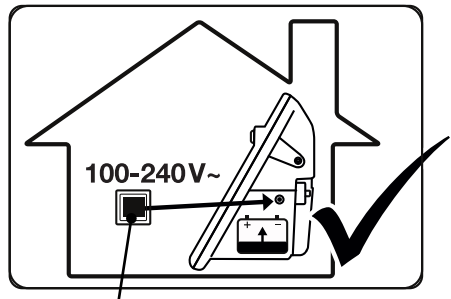

**LED battery charger:**  
green = fully charged  
red = charging  
To use: attach 110v recharger to the port on the side of the energizer.

**Fig. 4**

**WARNING!** When recharging battery with the 110v recharger, do not connect energizer to the fence.



## A. OPERATING INSTRUCTION FOR ELECTRIC FENCE ENERGIZER

IntelliShock PRS-I 25, IntelliShock PRS-I 50 & HotShock PRS-B 50

### WORKING PRINCIPLE:

The solar panel produces electric current when exposed to usable sunlight. The fence energizer requires a constant current, day and night. Thus the panel current is stored in the battery which delivers the energizer current. The solar panel might not always be capable of recharging the battery—especially in dark, grey and foggy months (i.e. October-February)

Tip: Recharge the battery externally as needed.

### STORAGE, RECHARGE, MOUNTING AND CONNECTIONS:

If not used, the unit has to be stored in light: e.g. in a south window especially during winter time. This is the only way to safeguard the built-in battery against low level discharge. As the case may be, please check the battery voltage monthly and recharge it with the 110v battery charging unit as needed.

Before and after storage, recharge the energizer in the sun for at least one day. If needed, recharge the battery—only with the included battery charging unit—so that the battery will stay in good working order (see Fig. 3).

### BATTERY CONNECTION

Connect the energizer battery leads to the terminals of the battery.

### ENERGIZER CONNECTION (using the enclosed wiring harness).





 

Drive the ground rod into moist soil.

Connect the ring end of the black lead to the energizer's green ground terminal. Connect the black clip to the ground rod.

Connect the ring end of the red/orange lead to the energizer's red fence terminal, connect red/orange clip to the fence. Orient the solar panel to the south.

Buttons: Turn on with button on/off (1) - after few seconds a green LED control flashes with the pulses. If there is no flashing either the battery is flat or there is a fault in the energizer.

The energizer has a pulse interval of 1 to 1.6 seconds. If the interval is different, than the energizer should be sent in for repair. Lightning damage can be recognized by burned traces. In this case, return the energizer for possible repair as well.

residual capacity					
	flashing light	green		40-100%	good battery
	flashing light	red/green		20-40%	charge the battery
	continious light	red		0-20%	very low battery; charge externally

### BATTERY INDICATION (FIG. 2):

Test battery only at daybreak. If the battery test light is flashing red/green, recharge the battery. The battery should never fall below a 20% charge (continuous red light). If this happens, permanent damage may occur to the battery.

Please note, that these values can vary due to the dependence of the battery itself, the age of the battery, the temperature (capacity) and mesuring deviation (tension).

### GROUNDING:

For a faultless operation and to obtain the optimal output, good grounding is essential. Therefore grounding must be made in a moist location. We recommend the use of a 3' galvanized ground rod per joule of output (18" for .50 joule and 9" for .25 joule). An additional or deeper ground rod may improve grounding. The distance between the system earth (grounding) and other earth systems (e.g. telephone, mains power, anti-lightning or other earth systems of another energizers) should be at least 30ft.



### CAUTION:

The energizer should only be opened or repaired by qualified personnel, to reduce the risk of electric shock!

### DUTY TO THE PUBLIC:

Safe electric fence construction - read and respect in conjunction with B. SAFETY HINTS ELECTRICAL ANIMAL FENCES. Electric fence can be hazardous when there is a risk of entrapment or entanglement, or other hazards exist. Serious injury or death may result. Take all steps to avoid the risk of entrapment or entanglement. Fasten warning signs to electric fence posts or wires at frequent intervals along any public roads or pathways. Incorporate a non-electrified gate or stile where an electric animal fence crosses a public pathway and fasten warning signs to fence posts or wires adjacent to the crossing.

## B. SAFETY HINTS ELECTRIC ANIMAL FENCES

General hints for the safe use, installation and operation

### PART 1: PRINCIPLES AND LIMITATIONS OF ELECTRIC FENCING FOR ANIMALS

An electric fence consists of an energizer and a connected fence where the energizer feeds electric impulses into the fence. The electric animal fence represents a “psychological barrier” for the animals; it keeps animals inside or outside a certain area, it can also be used to train a certain behaviour (e.g. cow trainer in the stable). The electric security fence is used for security purposes that comprise an electric fence and a physical barrier electrically isolated from the electric fence.

No electric or mechanical fence can guarantee a 100% effective solution in protecting or containing your animals. The effectiveness of an electric fence may vary upon the unique local conditions within which the fence is installed. A suitable combination of products together with competent installation will ensure the best results. On occasion a determined animal may overcome the most rigid of mechanical fences or the most comprehensive electric fence system. **For this reason the seller gives no assurance that the fence system is 100% safe against outbreak.** A well installed electric fence can offer a high level of security when compared to a mechanical fence, as the psychological barrier an electric shock can represent will deter the animal from finding a way to circumnavigate the fence. Electric fences will also offer far greater level of flexibility.

### PART 2: WARNING SAFE ELECTRIC ANIMAL FENCES

#### Read and mind before using – WARNING:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Never touch an electric fence wire with your head, mouth, neck or torso. Never allow anyone else to do so. Instruct all visitors and children to never do so. Do not climb over, through or under a multi-wire electric fence. Use a gate or a specially designed crossing point.
- To avoid any risks with head, mouth, neck or torso contacts do use only smaller energizers or the lower output of a stronger energizer on fences near children and untrained adults. With high joule energizers reduce the available energy on wires near children or untrained adults with a 500 ohm resistor. To do so, change the fence design or management to reduce the weed to wire contact, if necessary.
- Keep a distance of at least 2,5 m (8,3 ft) with the electric fence to all metallic parts i.e. to water-pipes and troughs especially if persons can be in the vicinity.
- Do not connect simultaneously to a fence and to any other device such as a cattle trainer or a poultry trainer. Otherwise, lightning striking your fence will be conducted to all other devices - Risk of Electric Shock.
- Do not place combustible materials near the fence or Energizer connections. In times of extreme fire risk, disconnect Energizer.
- If there is a danger of over-flooding, the energizer must be turned off.
- Help to avoid any misuse of the energizer by:
  - - Observing the printing
  - - Secure the energizer against un-allowed access (e.g. anti-theft or anti-children equipment) if the location make this necessary
- Check your local ordinance for specific regulations
- Read and mind Annex BB.1 of the International Safety Standard IEC 60335-2-76 + EN 60335-2-76 (s. page 7)

**Read and mind Annex BB.1 of the International Safety Standard IEC60335-2-76+ EN 60335-2-76:**

**Electric animal fences** and their ancillary equipment shall be installed, operated and maintained in a manner that minimises danger to persons, animals or their surroundings.

**WARNING:** Do not touch the fence with the head, mouth, neck or torso. Do not climb over, through or under a multi-wire electric fence. Use a gate or a specially designed crossing point.

**Electric animal fence constructions** that are likely to lead to the entanglement of animals or persons shall be avoided.

An **electric animal fence** shall not be supplied from two separate **energizers** or from independent **fence circuits** of the same **energizer**.

For any two separate **electric animal fences**, each supplied from a separate **energizer** independently timed, the distance between the wires of the two electric animal fences shall be at least 2,5 m (8,3 ft). If this gap is to be closed, this shall be effected by means of electrically non conductive material or an isolated metal barrier. Barbed wire or razor wire shall not be electrified by an **energizer**.

A non-electrified fence incorporating barbed wire or razor wire may be used to support one or more off-set electrified wires of an **electric animal fence**. The supporting devices for the electrified wires shall be constructed so as to ensure that these wires are positioned at a minimum distance of 150 mm from the vertical plane of the non-electrified wires. The barbed wire and razor wire shall be earthed at regular intervals.

Follow the energizer manufacturer's recommendations regarding earthing.

A distance of at least 10 m (33ft) shall be maintained between the **energizer earth electrode** and any other with the earthing system connected parts such as the power supply system protective earth or the telecommunication system earth.

**Connecting leads** that are run inside buildings shall be effectively insulated from the earthed structural parts of the building. This may be achieved by using insulated high voltage cable. Use this lead-out cable in buildings and where soil could corrode exposed galvanised wire. Never use household electrical cable: it is made for a maximum of 600 volts and will leak electricity.

**Connecting leads** that are run underground shall be run in conduit of insulating material or else insulated high voltage cable shall be used. Care must be taken to avoid damage to the connecting leads due to the effects of animal hooves or tractor wheels sinking into the ground.

**Connecting leads** shall not be installed in the same conduit as the mains supply wiring, communication cables or data cables.

**Connecting leads** and **electric animal fence** wires shall not cross above overhead power or communication lines.

Crossings with overhead power lines shall be avoided wherever possible. If such a crossing cannot be avoided it shall be made underneath the power line and as nearly as possible at right angles to it.

If **connecting leads** and **electric animal fence wires** are installed near an overhead power line, the clearances shall not be less than those shown in Table BB1.

**Table BB 1 - Minimum clearances from power lines for electrical animal fences**

Power line voltage ( V )	Clearance ( m )
≤ 1000	3 (10 ft)
> 1000 and ≤ 33000	4 (13 ft)
> 33000	8 (27 ft)

If **connecting leads** and **electric animal fence** wires are installed near an overhead power line, their height above the ground shall not exceed 2m (6ft)

This height applies to either side of the orthogonal projection of the outermost conductors of the power line on the ground surface, for a distance of

- 2 m for power lines operating at a nominal voltage not exceeding 1000 V;
- 15 m for power lines operating at a nominal voltage exceeding 1000 V

**Electric animal fences** intended for deterring birds household pet containment or training animals such as cows need only be supplied from low output energizers to obtain satisfactory and safe performance.

In **electric animal fences** intended for deterring birds from roosting on buildings no fence wire shall be grounded if the fence wires are not connected to metal parts. If one wire is connected with a metal part (i.e. a gutter) or a metal structure of the building these metal parts must be grounded. A warning sign shall be fitted to every point where persons may gain ready access to the conductors.

Where an **electric animal fence** crosses a public pathway, a non-electrified gate shall be incorporated in **the electric animal fence** at that point or a crossing by means of stiles shall be provided. At any such crossing, the adjacent electrified wires shall carry warning signs. In areas of public access, use an electric fence warning sign (G6020) every 10m (33ft) to identify the electrified wire(s).

Any part of an **electric animal fence** that is installed along a public road or pathway shall be identified at frequent intervals by warning signs securely fastened to the fence posts or firmly clamped to the fence wires.

The size of the warning sign shall be at least 100 mm × 200 mm (4 inch x 8 inch).

The background colour of both sides of the warning sign shall be yellow. The inscription on the sign shall be black and shall be either

- the symbol of Figure BB1, or
- the substance of **CAUTION: Electric fence**.

The inscription shall be indelible, inscribed on both sides of the warning sign and have a height of at least 25 mm (10 inch).

Ensure that all mains-operated, ancillary equipment connected to the electric animal fence circuit provides a degree of isolation between the fence circuit and the supply mains equivalent to that provided by the energizer.

NOTE 1 Ancillary equipment that complies with the requirements relating to isolation between the fence circuit and the supply mains in Clauses 14, 16 and 29 of the standard for the **electric fence energizer** is considered to provide an adequate level of isolation.

Protection from the weather shall be provided for the ancillary equipment unless this equipment is certified by the manufacturer as being suitable for use outdoors, and is of a type with a minimum degree of protection IPX4.

### **Read and mind for special applications**

- Of electric fences in pastures: Train livestock to Power Fencing prior to entry into pastures. Allow livestock to approach a Power Fence for the first time without stress.
- of **electric fences in zoos and game reserves**: The mounting of such installations may only be carried out by trained specialist, a mechanical barrier must be provided which separates the electric fence from visitors.
- of Game Fencing: Power Fencing has been used widely throughout the world for game animals, deer, bears, elk and elephant. Power Fences are a psychological barrier and should not be considered a complete physical barrier fence. With any Power Fence occasional animal penetration may occur (as with any other type of fence). It is important for game fencing to have power on the fence the same day as the fence is constructed. Animals investigating the new obstruction will be shocked and will relate the shock to the new obstruction. If no power is on the fence and animals learn to walk through the fencing system with no electric shock, this causes major problems later on since they will not relate the electric shock to the fence after the power is turned on. A Power Fence is not recommended for animals under hunting pressure. For specific questions on game fencing contact your dealer.
- of Bird Determent: Where the Energizer is used to supply a system of conductors used for deterring birds from roosting on buildings, no conductor should be connected to earth. A switch should be installed to provide means of isolating the Energizer from all poles of the supply and clear warning signs should be fitted at every point where persons may have ready access to the conductors. The notice should bear the words "LIVE WIRES" in block letters not less than 13mm (½" high). The letters should be red on a white background. Each notice should be at least 62mm x 50mm (2½" x 2").



### **PART 3: SAFETY HINTS ELECTRIC ANIMAL FENCES** **- To Reduce Risk and Liability ...**

#### **REMEMBER:**

Never touch an electric fence wire with your head or upper torso (see photo at right).

Never allow anyone else to do so. Instruct all visitors and children to never do so.

#### **Risk and Liability Reduction Methods**

1. For reasons not fully understood, contact with the spinal & head area is much worse than contact with hands, arms or legs.
2. Most experts agree that smaller energizers are safer than large ones (as long as animal control is not put at risk). So use smaller energizers on fences near children and untrained adults. To do so, change the fence design or management to reduce the weed to wire contact.
3. Never connect two energizers to one wire at the same time.
4. Never energize barbed wire.
5. With high joule energizers reduce the available energy on wires near children or untrained adults with a 500 ohm resistor. (Not illustrated here.)
6. Hang warning signs on the fence at critical areas where children or untrained adults will encounter them (inset at right).
7. Where practical do not energize wires less than 12 in. above the soil. Why? To allow humans that might contact a wire enough space to fall (by gravity) away from any energized wires.
8. Ensure that all energized wires are on the inside of your boundary fence (ensuring that anyone who touches them without your permission is a trespasser). For boundary fences achieve this with internal energized offset wires.
9. The shock from electric fences can panic animals who may in turn crash into fences (or people) resulting in injury to one or both. Horses have been known to rear and throw their rider-resulting in injuries to both.

#### **To reduce this risk:**

- a. Build only non-electric fences along horse trails, around livestock corrals and surrounding lots.
- b. Reduce the available volts and joules on fences that enclose very small areas (e.g. night enclosures) thus reducing panic and stress.




*Never allow your head to get near an electrified wire. This photo was taken to illustrate what **not** to do.*

*Accidental head/neck contact can occur when pushing a voltage probe into the soil when checking voltage. Be very careful when you do so to avoid head to wire contact.*

*A fence that is exposed to untrained adults or children should never be without warning signs. Without them your liability may well be higher.*


## TECHNICAL DATA

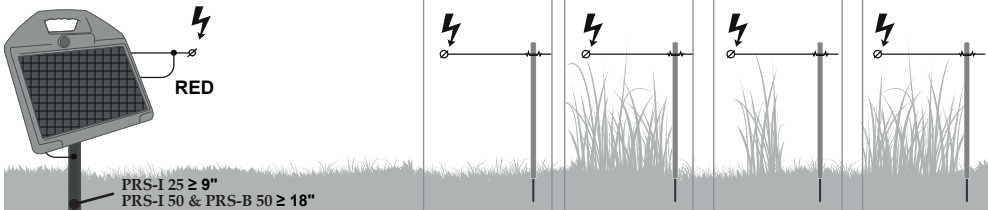


PRS-I 25 ≥ 9"  
PRS-I 50 & PRS-B 50 ≥ 18"

	12v DC draw	Input	0 mi	0.16 mi 1 M Ω	0.16 mi 500 Ω	3.1 mi 5 k Ω	3.1 mi 500 Ω
IntelliShock PRS-I 25	13-27 mA/hr	0.33 joule	max. 8900 v	~ 9000 v	~ 3000 v	~ 2600 v	~ 1600 v
IntelliShock PRS-I 50	20-50 mA/hr	0.65 joule	max. 10500 v	~ 11000 v	~ 3600 v	~ 4200 v	~ 2300 v
HotShock PRS-B 50	50 mA/hr	0.65 joule					

### CEE: MAX. FENCE LINE LENGTH

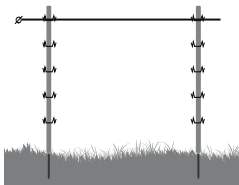

IntelliShock PRS-I 25 = 8 mi  
IntelliShock PRS-I 50 = 13 mi  
HotShock PRS-B 50 = 13 mi

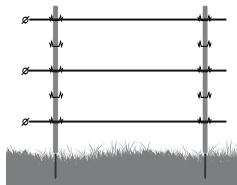

IntelliShock PRS-I 25 = 8 mi / 3  
IntelliShock PRS-I 50 = 13 mi / 3  
HotShock PRS-B 50 = 13 mi / 3

**SUBJECT TO TECHNICAL ALTERATIONS !**





2031 300th Street · Washington, IA 52353  
[www.premier1supplies.com](http://www.premier1supplies.com)  
800-282-6631 · 319-653-7622



horizont  
assembled in US and Europe  
horizont group gmbh  
Division agrartechnik