

Nest-O-Matic Nest Box *Assembly Instructions*


#540410

TOOL REQUIRED:

- Phillips Screwdriver
- #10 Metric Wrench or Socket
- Adjustable Wrench


HARDWARE:

Note: Only partially tighten all hardware until final assembly.

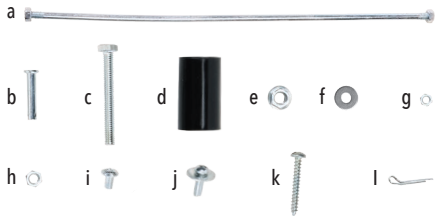

a (2) Shafts	#5404106
b (2) Hinge pins	#5404109
c (4) 50mm bolts	#5404110
d (4) Spacers	#5404111
e (4) 6mm shoulder nuts	#5404112
f (4) 6mm washers	#5404113
g (4) 5mm nuts	#5404115
h (4) 6mm nuts	#5404116
i (4) 5mm bolts	#5404117
j (10) 17mm machine screws & washers	#5404118
k (2) 25mm screws	#5404119
l (2) Cotter pins	#5404121

PARTS:

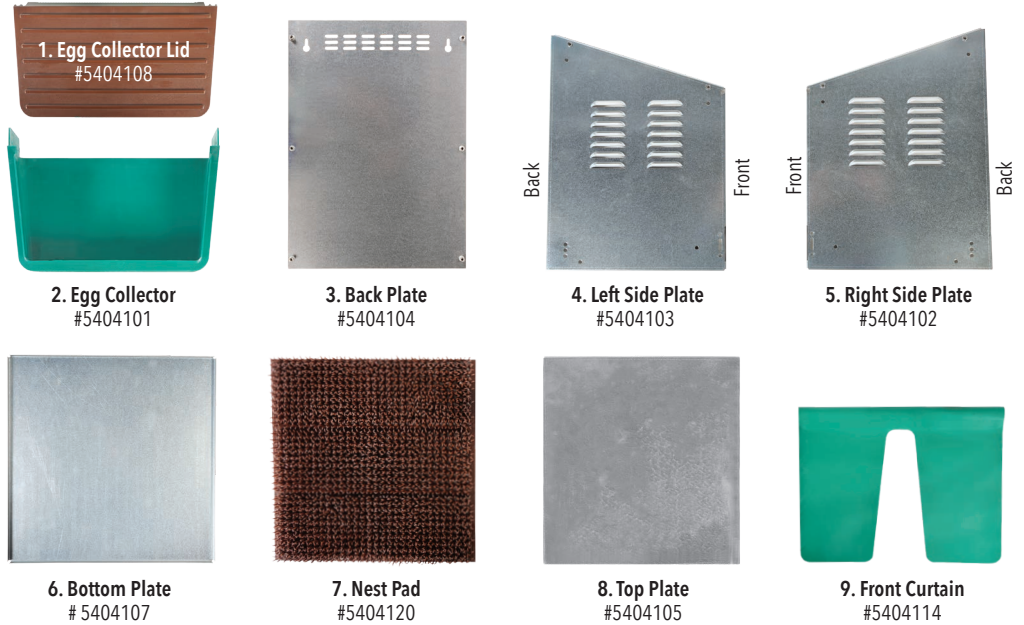

800-282-6631 | premier1supplies.com

© Copyright 2022, Premier1Supplies. All rights reserved.



Install two hinge pins (b) with cotter pins (l) to attach lid (1) to egg collector (2).



Install back plate (3) to left and right side plates (4, 5) using six 17mm machine screws with washers (j).



Insert shaft (a) into desired height through the back of side plates then secure using 6mm nut (h) to each side.


Do not tighten all the way until completely assembled or bottom will not fit.



Install the bottom plate (6) by setting back of bottom plate on top of back shaft and front to the bottom of side plates.



Insert nest pad (7) into bottom of the Nest-O-Matic.

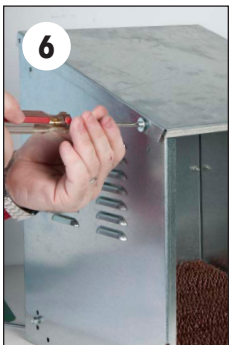

Install top plate (8) using four 17mm machine screws with washers (j).



Install front curtain (9) using shaft (a) and 6mm nuts (h) to each side.



Attach egg collector (2) using four 5mm bolts (i) and nuts (g). Tighten all hardware.



If attaching multiple boxes together

Install four spacers (d), washers (f), 6mm shoulder nuts (e) and 50mm bolts (c) to the side of the box.



If attaching the box to a wall

Use two 25mm screws (k). Attach via back plate (3), not sides.